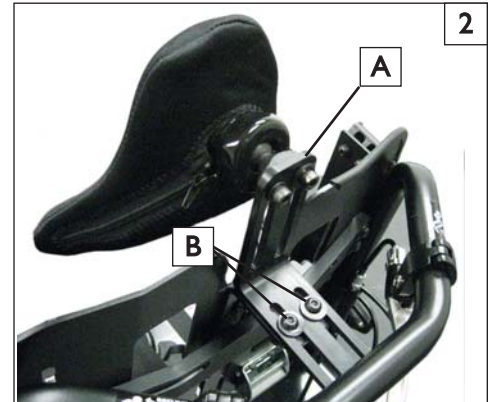
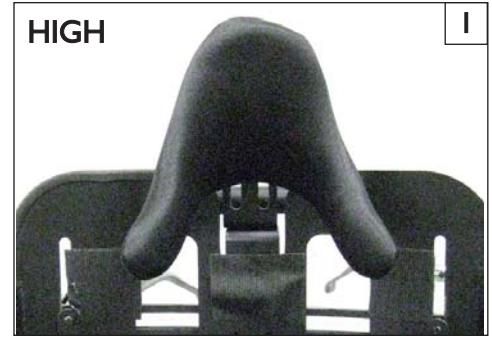


INSTALLING THE HEADREST

The Headrest can be mounted to the backshell using 2x 2-hole slide nut, 2x M6x1x16 bolts, 2x 1/4-28 x 5/8" machine screws, and 4x washers.

1. High mount position Headrest installation 1 2

- a. Mount the headrest and bracket (A) as shown, using 2x M6 bolts and washers (B), and the 2-hole slide nut.
- b. After adjusting the headrest to optimum support position, use the 4mm hex key to tighten the screws

**2. Low mount position Headrest installation** 3 4 5

- a. To mount the headrest in the low position, invert the bracket(A).
- b. Using the 2x M6 bolts and washers (B), and the 2-hole slide nut, attach the bracket as shown.
- c. To orient the headrest (D) right-side up, use a 3/16" hex key to remove the two 1/4-28 x 5/8 headrest screws (C) orient the headrest as shown and re-attach the screws.
- d. After adjusting the headrest to optimum support position, use the 4mm and 3/16" hex keys to make sure the screws are tight

