

# Wheel Lock Setup



Zippie IRIS


25-Jul-13

- No-Go
- Setup Not Available
- \*Forward
- Rearward
- Short Rearward


## Long Attendant Wheel Lock Position

Rear Wheel Size


	Roller Pos	Axle Pos						
		11	12	13	14	15	16	17
12	1			2	1			
	2			3	2	1	1	
	3		1*	3	3	2	1	1
	4			1*	3	3	2	
	5				1*	3	2	
16	1	1*						
	2		1*			2	2	
	3		1*	1*		3	2	2
	4			1*	1*	3	3	
	5				1*	1*	3	
20	1	2*	2*	1*	1*			
	2		2*	2*	1*	1*		
	3		3*	2*	2*	1*	1*	
	4			3*	2*	2*	2*	
	5				3*	2*	2*	
22	1	3*	2*	2*	1*			
	2		3*	2*	2*	1*		
	3		3*	3*	2*	2*	1*	
	4			3*	3*	2*	2*	
	5				3*	3*	2*	
24	1	3*	3*	2*	1*			
	2		3*	2*	2*	1*	1*	
	3		3*	3*	3*	2*	2*	1*
	4				3*	2*	2*	
	5					3*	3*	

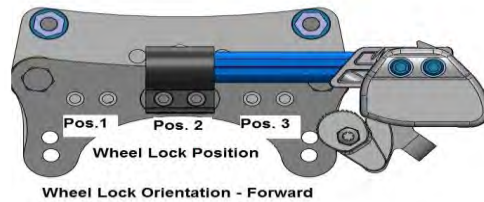

Wheel Lock Orientation - Forward

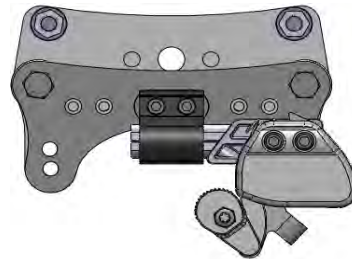

Wheel Lock Clamp Upward Position

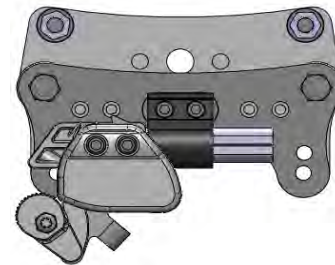

Wheel Lock Clamp Downward Position

**Notes:**

- \* When Axle Plate Orientation is in 1-4 (ENG1036), install wheel lock clamp in upward position
- \* When Axle Plate Orientation is in 5-8 (ENG1036), install wheel lock clamp in downward position

# Wheel Lock Setup




Zippie IRIS

25-Jul-13

- No-Go
- Setup Not Available
- \*Forward
- Rearward
- Short Rearward

## Short Rearward Attendant Wheel Lock Position

Rear Wheel Size	12	Roller Pos	Axle Pos							
			11	12	13	14	15	16	17	
		1	3	3						
		2		3						
		3								
		4								
5										
16	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1		3	3	2					
	2			3	3					
	3				3					
	4									
5										
20	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2						3			
	3							3		
	4									
5										
22	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2									
	3									
	4									
5										
24	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2									
	3									
	4									
5										

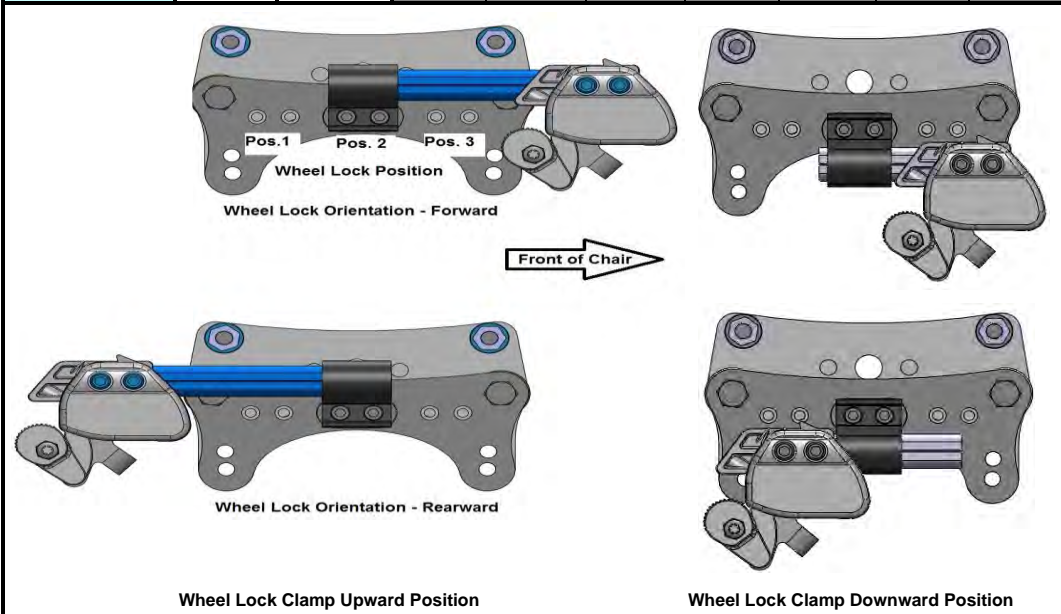

**Notes:**

- \* When Axle Plate Orientation is in 1-4 (ENG1036), install wheel lock clamp in upward position
- \* When Axle Plate Orientation is in 5-8 (ENG1036), install wheel lock clamp in downward position

# Wheel Lock Setup



Zippie IRIS


Date:

25-Jul-13

- No-Go
- Setup Not Available
- \*Forward
- Rearward
- Short Rearward

Long Push to Lock Wheel Lock Position

Rear Wheel Size	Roller Pos	Axle Pos						
		11	12	13	14	15	16	17
12	1		2	1	1			
	2			2	1	1	1	
	3		3	2	2	1	1	1
	4			3	2	2	1	
	5				3	2	2	
16	1	1*		2	2			
	2		1*	3	2	2	1	
	3		1*	1*	3	2	2	1
	4			1*	1*	3	2	
	5				1*	1*	3	
20	1	2*	2*	1*				
	2		2*	2*	1*		3	
	3		3*	2*	2*	1*	1*	3
	4			3*	2*	2*	1*	
	5				3*	2*	2*	
22	1	3*	2*	2*	1*			
	2		3*	2*	2*	1*	1*	
	3		3*	2*	2*	1*	1*	3
	4			3*	3*	2*	2*	
	5				3*	3*	2*	
24	1	3*	3*	2*	2*			
	2		3*	3*	2*	2*	1*	
	3		3*	3*	2*	2*	1*	1*
	4			3*	3*	3*	3*	2*
	5				3*	3*	3*	

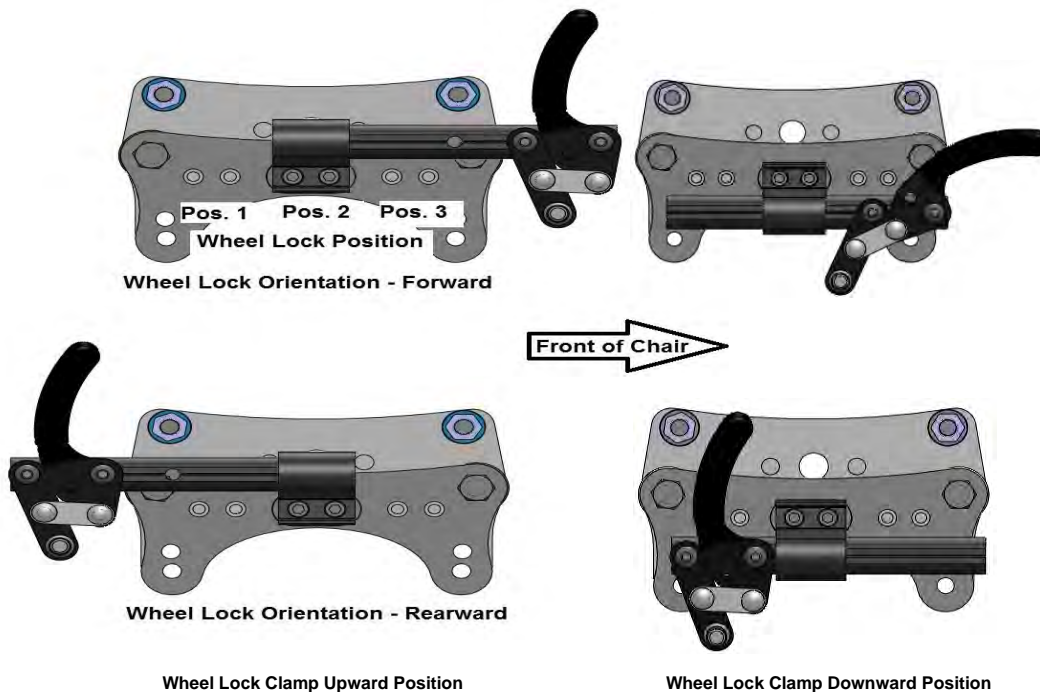

**Notes:**

- \* When Axle Plate Orientation is in 1-4 (ENG1036), install wheel lock clamp in upward position
- \* When Axle Plate Orientation is in 5-8 (ENG1036), install wheel lock clamp in downward position

# Wheel Lock Setup



Zippie IRIS

25-Jul-13

- No-Go
- Setup Not Available
- \*Forward
- Rearward
- Short Rearward

## Short Rearward Push to Lock Wheel Lock Position

Rear Wheel Size	12	Roller Pos	Axle Pos							
			11	12	13	14	15	16	17	
		1	3							
		2		3						
		3								
		4								
5										
16	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1		3							
	2									
	3									
	4									
5										
20	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1				3					
	2					3				
	3									
	4									
5										
22	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2									
	3									
	4									
5										
24	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2									
	3									
	4									
5										

**Wheel Lock Orientation - Forward**

**Wheel Lock Orientation - Rearward**

**Wheel Lock Clamp Upward Position**

**Wheel Lock Clamp Downward Position**

**Notes:**

- \* When Axle Plate Orientation is in 1-4 (ENG1036), install wheel lock clamp in upward position
- \* When Axle Plate Orientation is in 5-8 (ENG1036), install wheel lock clamp in downward position